
## Electric/Air Solenoid Valve

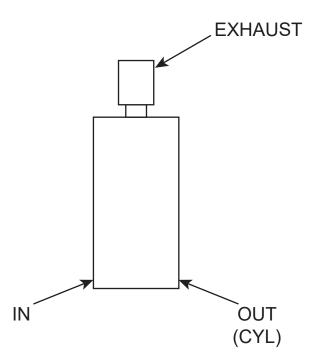

Voltage: 12 Volts DC Ports: 1/4" NPT

The 90054074 solenoid is normally closed. Air pressure applied to the IN port will not pass to the CYL port until power is applied.

One wire must be attached to ground. The other wire must be attached to your switched power source. It does not matter which wire you use for power or ground.

There are two 10-32 threaded holes on the bottom of the solenoid. They're spaced 1-1/4" apart.