
tellar Vision 31 owner's Manual

10-30V High Power COB LED

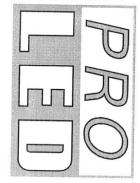

PTO	
0	
4	
	A BESTER
=	
0	据 羅 網
den.	題 園園
****	COLUMN TO
27 PR	A 100 100 100 100 100 100 100 100 100 10
n g	1
P	
	治區 解計器
Prod	* T
(M) (M)	
·- E	門 田田
C	部 期間
0	图 周岁
-	
c s	20

Power Requirements

designed to be powered by Stellar Vision series light bars are

10-30 volt DC.

Installation

We recommend the all in one Pro LED SW3 switch which wires as follows: You will need one on/off switch and one momentary switch (not included) Red = +VDCThe permanent mount version includes only a wire pigtail with three wires Black = Ground, Blue = +VDC (Function Change)




- 1. On / Off switch
- Red wire = +VDCBlack wire = Ground
- Momentary switch Red wire = +VDCBlack wire = Ground
- Blue wire = +VDC (Function Change)

Changing Flash Patterns


light to go back to the first pattern. to the next pattern. Pressing the momentary switch for 5.0 seconds will reset the Pressing the momentary switch for 0.5 to 2 seconds will cause the light to switch


Warranty

workmanship for a period of 1 year from the date of purchase or delivery. Pro LED warrants the Stellar Vision series lights against defects in material or

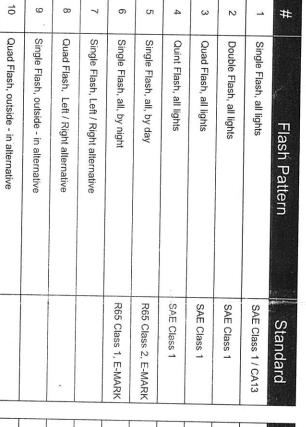

		#	Flash Pattern	Standard
ω		11	Rotation, slow mode	
		12	Rotation, fast mode	
		13	Single, odd / even	
		14	Patrol mode, left to right then right to left	
2		15	Arrow Flash, left to right	
		16	Arrow Flash, right to left	
		17	Airport mode, Single Flash	ICAO Type C
	1	18	Airport mode, Single Flash	ICAO Type D
	Г—	19	Steady on	

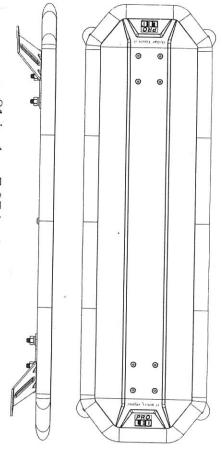

 

31 inch x 7.87 inch x 1.01 inch

of any light that shall prove to be defective according to our judgement. under any circumstances. Our liability is limited strictly to the repair or replacement Pro LED will not recognize claims for labor charges or any consequential damages