

MOUNTING INSTRUCTIONS - AR100

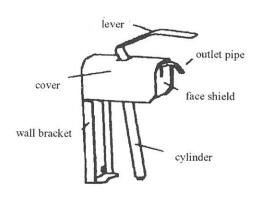

1. Loosen screws and slide aluminum cover forward until it stops against the screws. This action should release the wall bracket. which can be removed by holding on to the cover and pulling the wall bracket downward.



5. Install bottle by sliding the bottle neck up the dispenser cylinder.


6. Slide the base of the bottle onto the shelf of the wall bracket.



2. Use screws and plugs provided (or other appropriate fasteners) to mount the wall bracket. Allow 11" of space below wall bracket so that the bottle can be removed easily.



7. Depress the lever vigorously 4-5 times to prime the unit.

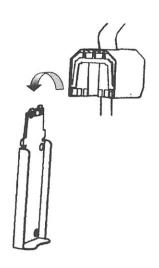

- 3. With cover in the forward position, the dispenser can be mounted onto the wall bracket. Gently push the dispenser downward so that the cover can be engaged in the slots.
- 4. Slide the cover back until it touches the wall surface. Tighten the screws located on the underside of cover.

Stroke Adjustment

When a smaller stroke is desired.

Once unit is primed, remove the



Helpful Hint:

If unit ever fails to prime readily, then gently cover outlet pipe opening with one finger. Depress the lever 4-5 times. Be careful not to spray soap when unit starts to pump.

Note: If the dispenser is left unused for long periods, some soap products may dry inside of pump. If this occurs, soak the dispenser in warm water until the unit can be pumped freely.

